
EAL
ELECTRIC ADVANCE & LIFT BRACKET

future automation

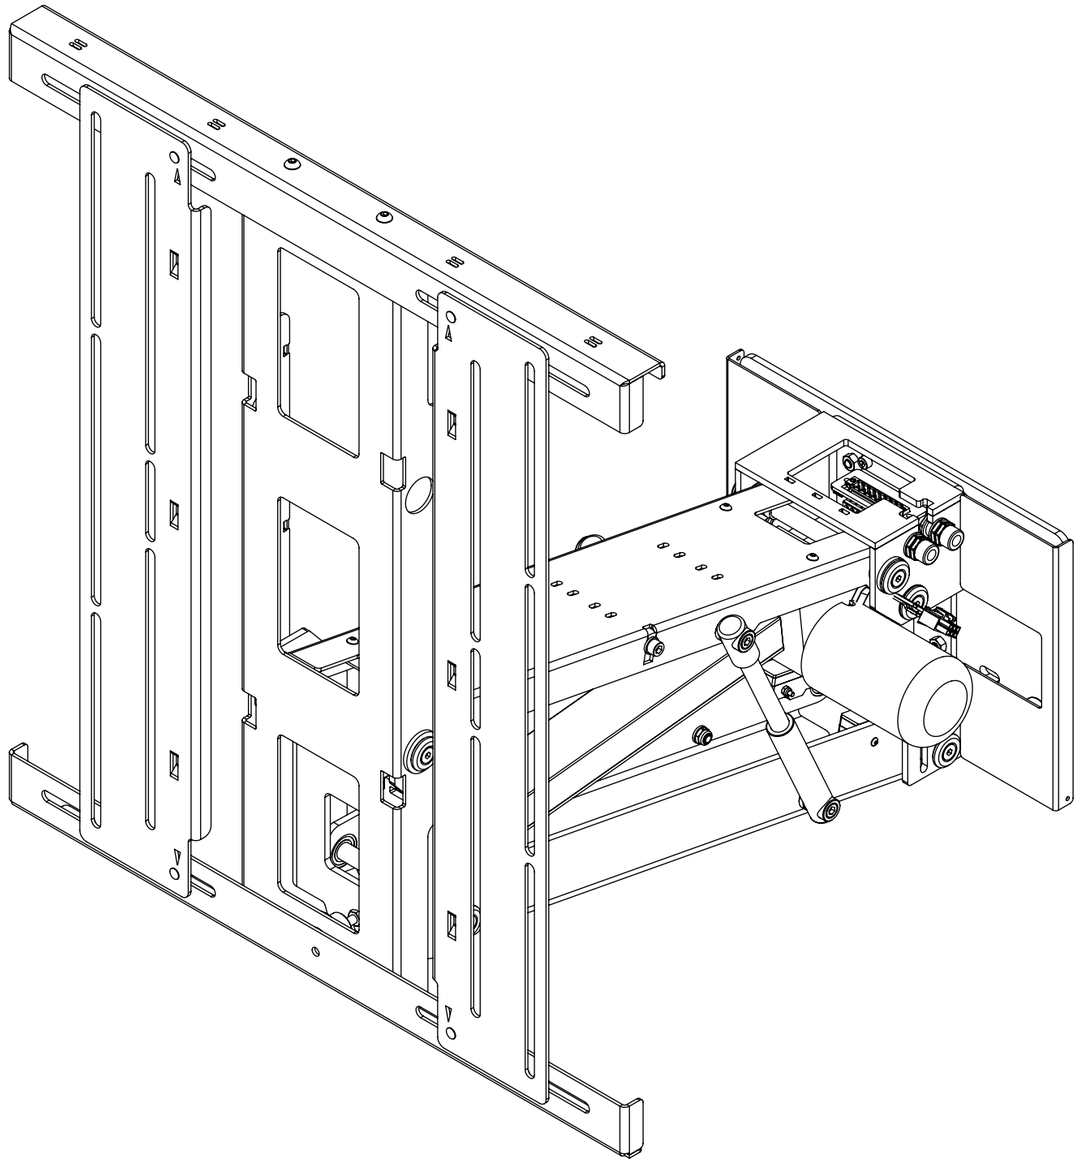

UK +44 (0) 1438 833577 **US** +1 (603) 742 9181
www.**FUTUREAUTOMATION**.NET

TECHNICAL SHEET
ISSUE 005
SHEET 1

EAL
ELECTRIC ADVANCE & LIFT BRACKET

future automation

SPECIFICATION	MEASUREMENTS
Screen Sizes (Approx)	50"-80"
Maximum Weight Capacity	50Kg (110lb)
Depth From Wall	138mm (5 7/16")
Maximum Extension From Wall	550mm (21 5/8")
Maximum Lift from In Position	533mm (21")
Packaging Dimensions	840 x 750 x 270mm (33 1/16" x 29 1/2" x 10 5/8")
Shipping Weight	25Kg (55lb)
Movement Type	Motorised
Power Supply Required	110V - 240V AC
Power Consumption Max.	120W
Power Consumption Standby	3W
Mounting Patterns Supported	VESA 600, 500, 400, 300, 200, 100 W x 500, 400, 300, 200, 100 H
Control Options	IR Remote, RS232, Contact Closure
Product Options / Features	Specific B&O and Loewe mounts / adapters, Custom RAL paint finishes
Package Contents	Mechanism, IR remote control, Control box
Marine Suitable	No


EAL
ELECTRIC ADVANCE & LIFT BRACKET


CABLE ROUTING

The EAL's mounting allows for cables from the screen to be fed through the intergrated cable management. This allows the cables to be stowed tidily within the mechanism.

Screen and Mechanism cables should be routed to a control box behind the wall via an opening in the back of the wall or a conduit leading to it.

NOTE: TURN THE MECHANISM OFF FROM THE MAINS WHEN ROUTING CABLES. THE EAD HAS A VERY POWERFUL MOTOR AND NO ANTI JAM FEATURE AVAILABLE!

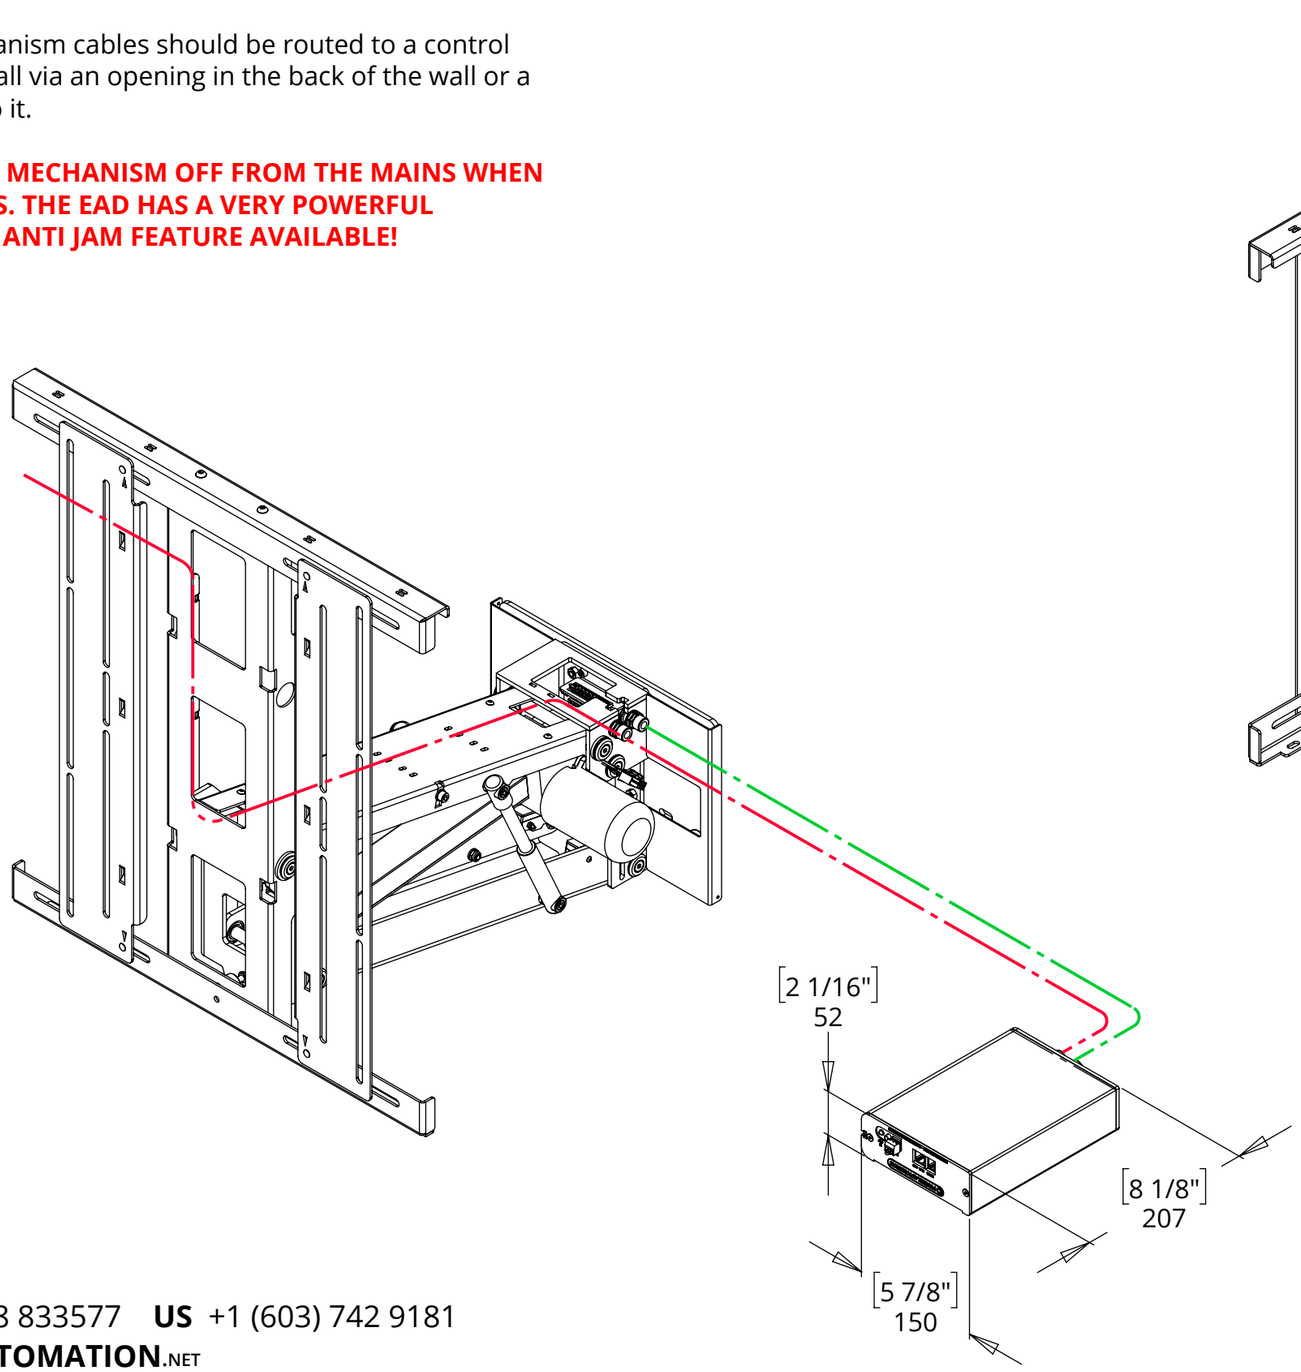

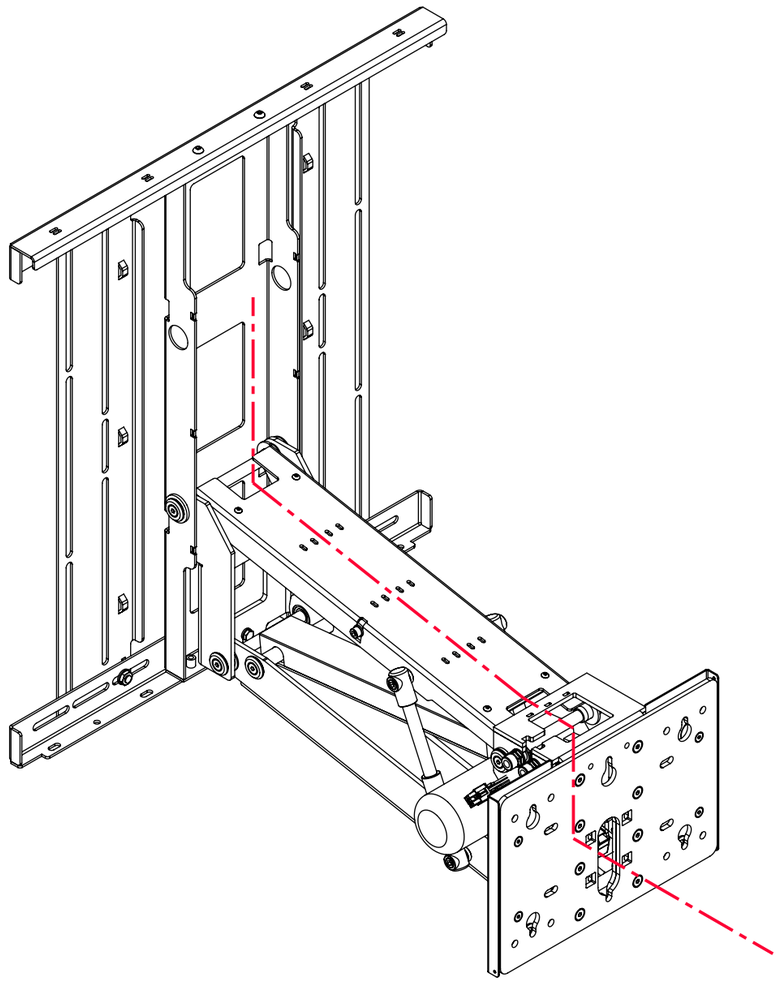

UK +44 (0) 1438 833577 **US** +1 (603) 742 9181
www.**FUTUREAUTOMATION**.NET

TECHNICAL SHEET
ISSUE 005
SHEET 3


EAL
ELECTRIC ADVANCE & LIFT BRACKET


POSITIONING AND MOVEMENT DETAILS

The EAL can clear a 305mm (12") mantle piece with ease when mounted 70mm (2 3/4") below it.

A screen with height of 690mm (27 3/16") will be required to cover the mechanism

The graph below gives an approximation of wall plate height position assuming the top edge of the screen is flush with the wall plate.
Black Line = Wall mounted
Red Line = Recessed in WB-EAD

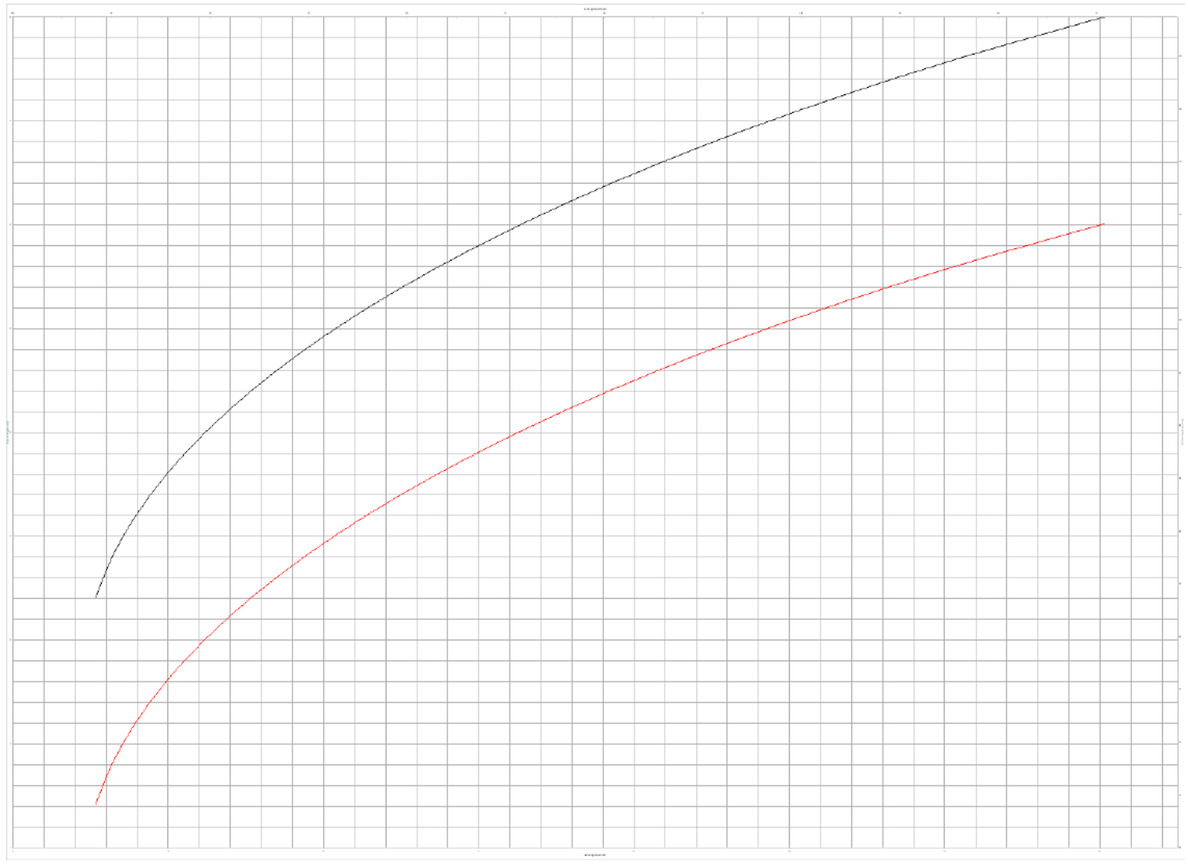

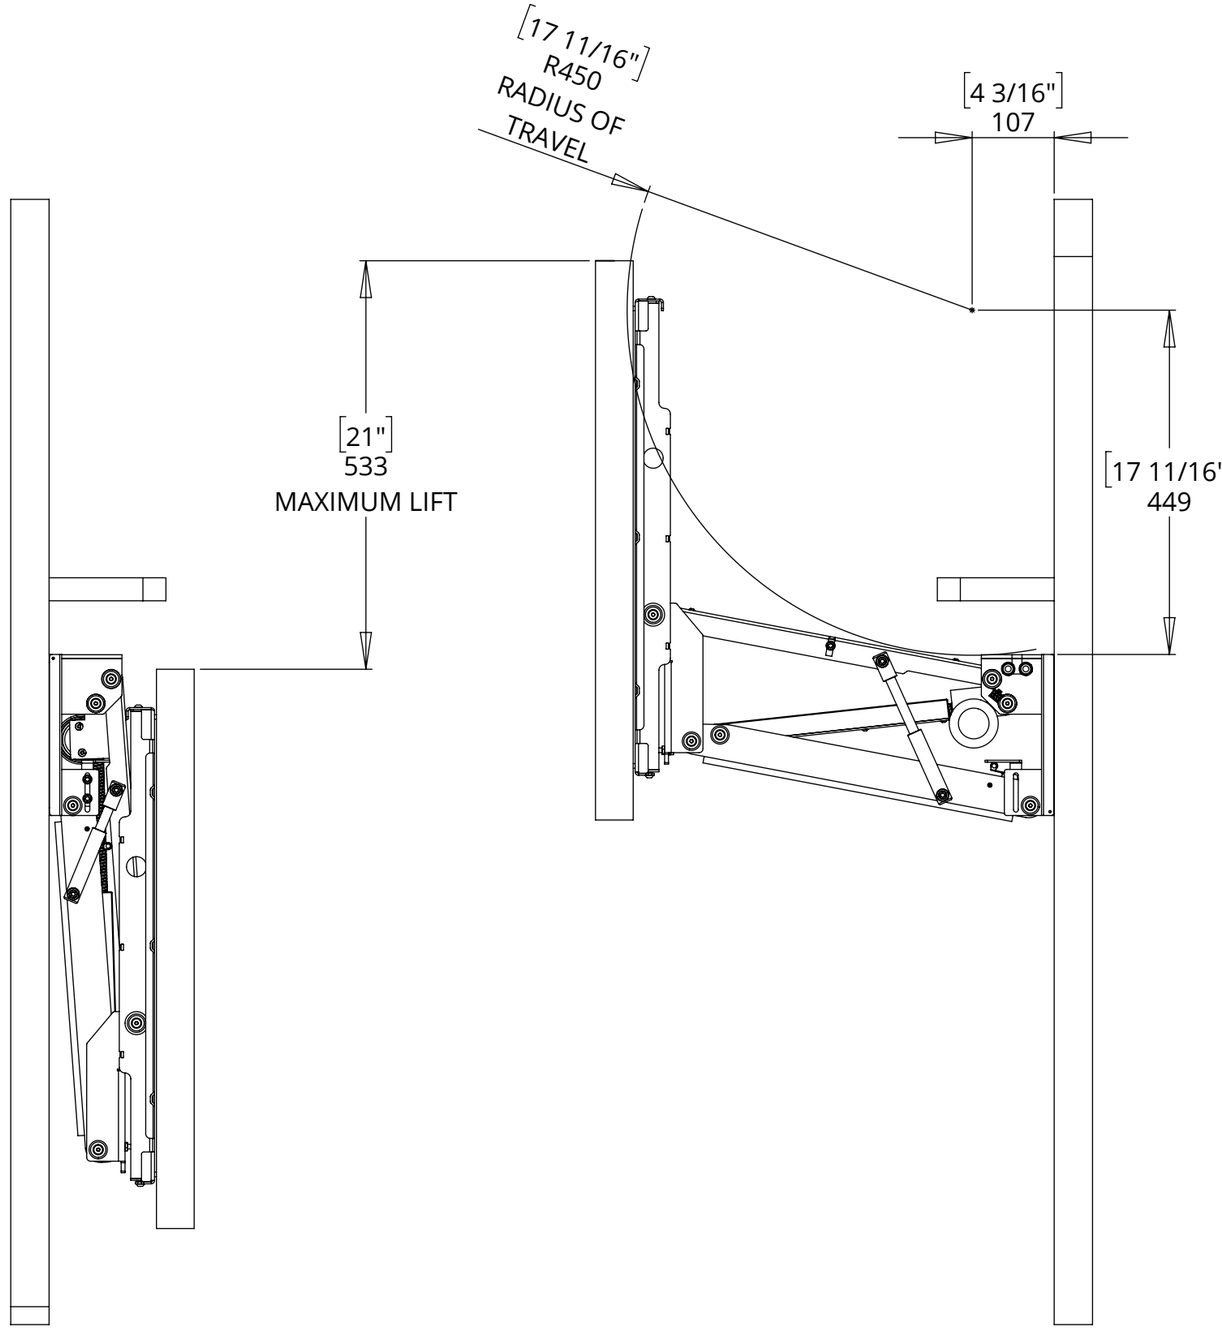

If the EAL is being recessed then the figure for mantle piece depth increases by the recess depth value.

If the upper screen edge is not flush with the EAL wall plate (as shown in views right) then the wall plate height below mantle increases by the offset amount.


Due to mechanical tolerances between moving components, mechanisms may experience a level deviation of up to +/- 0.15deg between the in and out positions.

EAL
ELECTRIC ADVANCE & LIFT BRACKET

SCREEN MOUNTING


Remove screen mount as shown below and assemble to screen.

Reassemble screen mount to mechanism in reverse of disassembly. Route cables as shown.

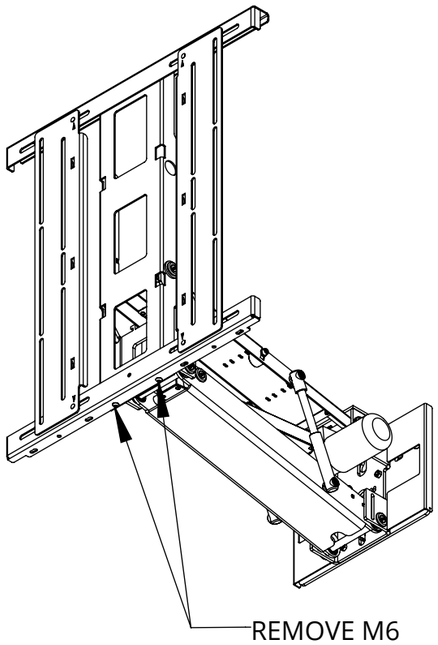


REMOVE M6 BOLTS


TILT AND UNHOOK MOUNT PLATE

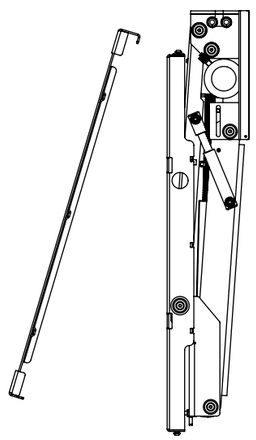

BOLT MOUNT TO SCREEN

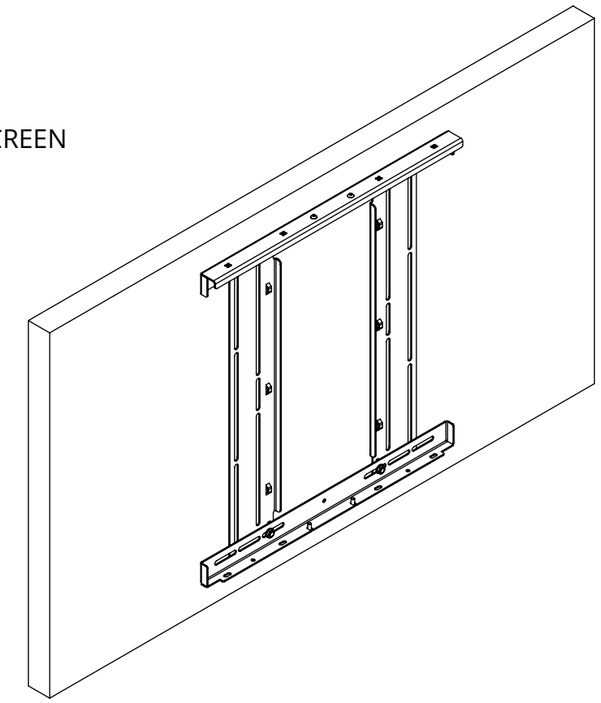

HOOK ON AND RE-INSERT M6 BOLTS

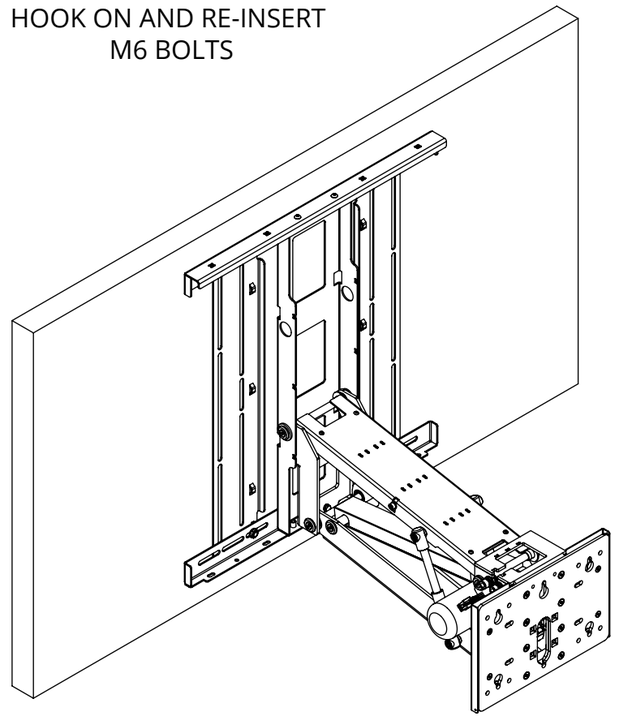


UK +44 (0) 1438 833577 **US** +1 (603) 742 9181
www.**FUTUREAUTOMATION**.NET


EAL
ELECTRIC ADVANCE & LIFT BRACKET


POSITION ADJUSTMENT

The EAL can be adjusted to fine tune the up and down positions.

Refer to instructions for more information on switch adjustment.

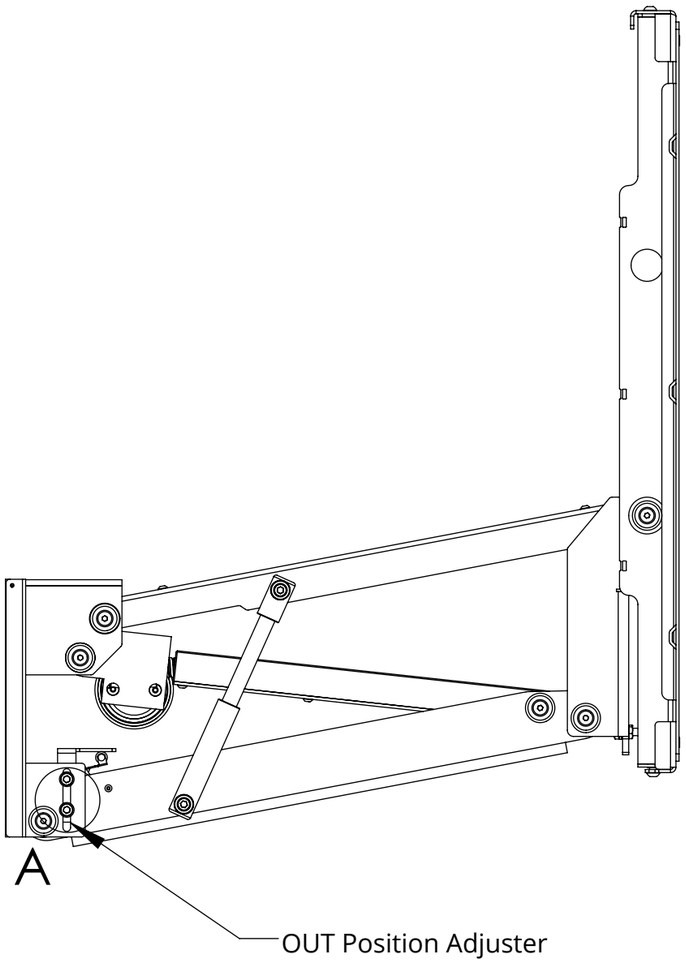

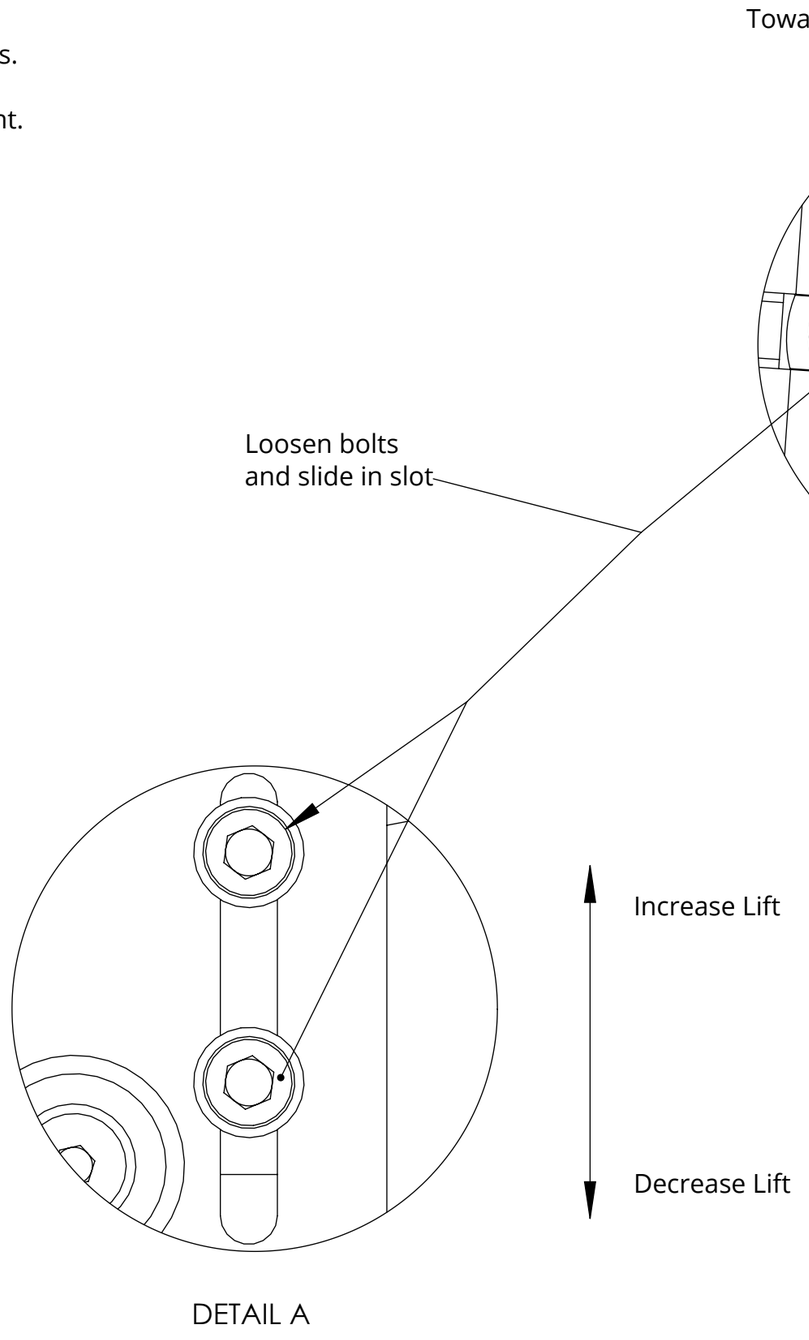


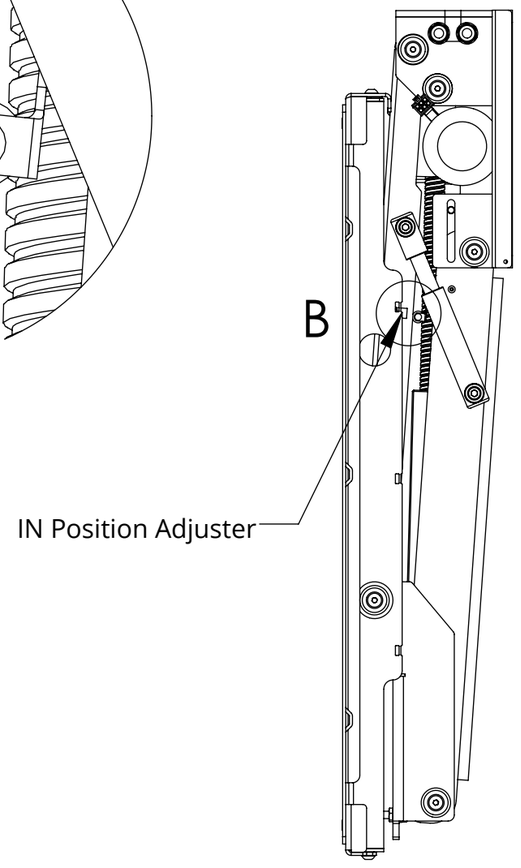



UK +44 (0) 1438 833577 **US** +1 (603) 742 9181
www.**FUTUREAUTOMATION**.NET


EAL
ELECTRIC ADVANCE & LIFT BRACKET

DOWN POSITION DIMENSIONS

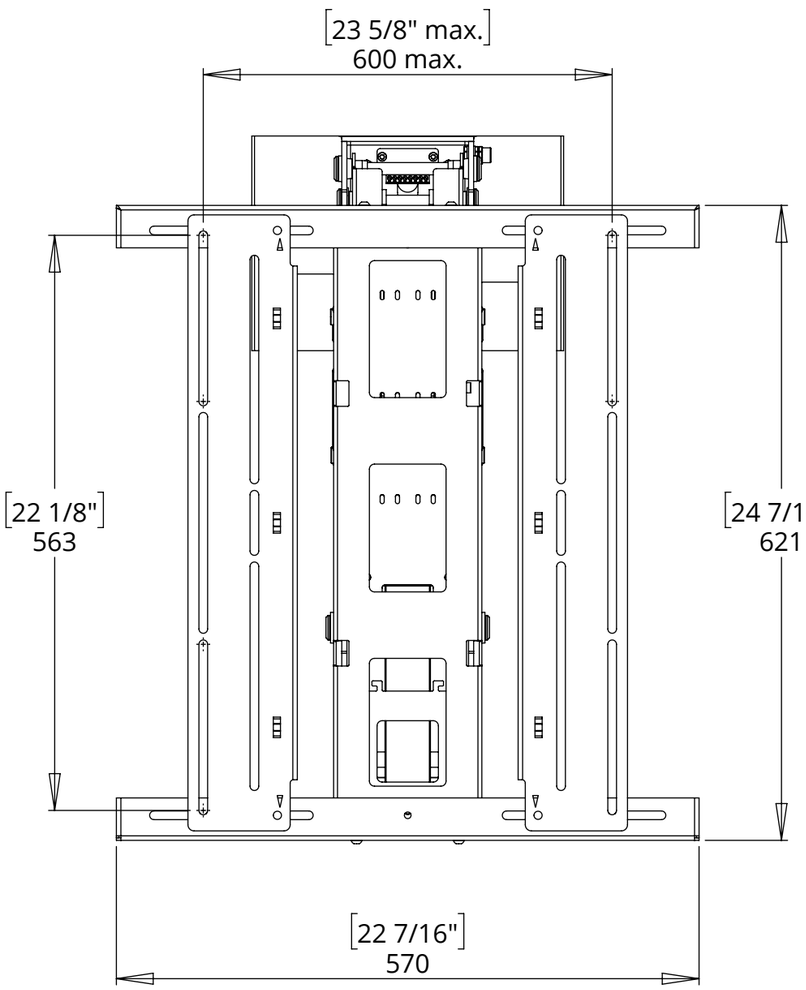

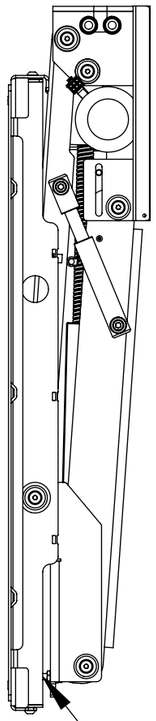

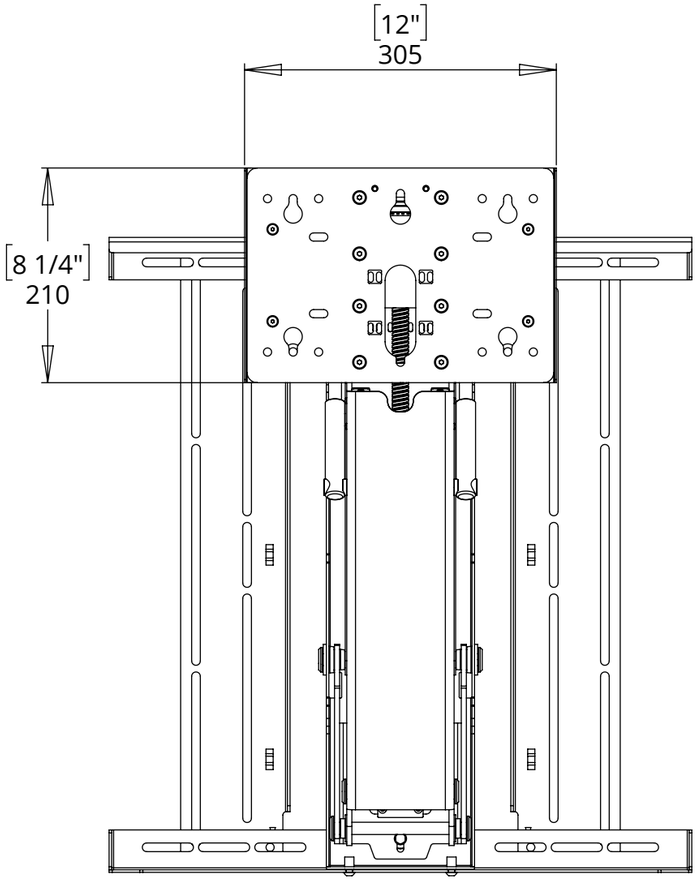

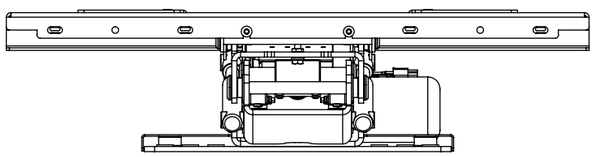


Upright allows
for 3° of tilt


UK +44 (0) 1438 833577 **US** +1 (603) 742 9181
www.**FUTUREAUTOMATION**.NET

EAL
ELECTRIC ADVANCE & LIFT BRACKET

future automation

UP POSITION DIMENSIONS

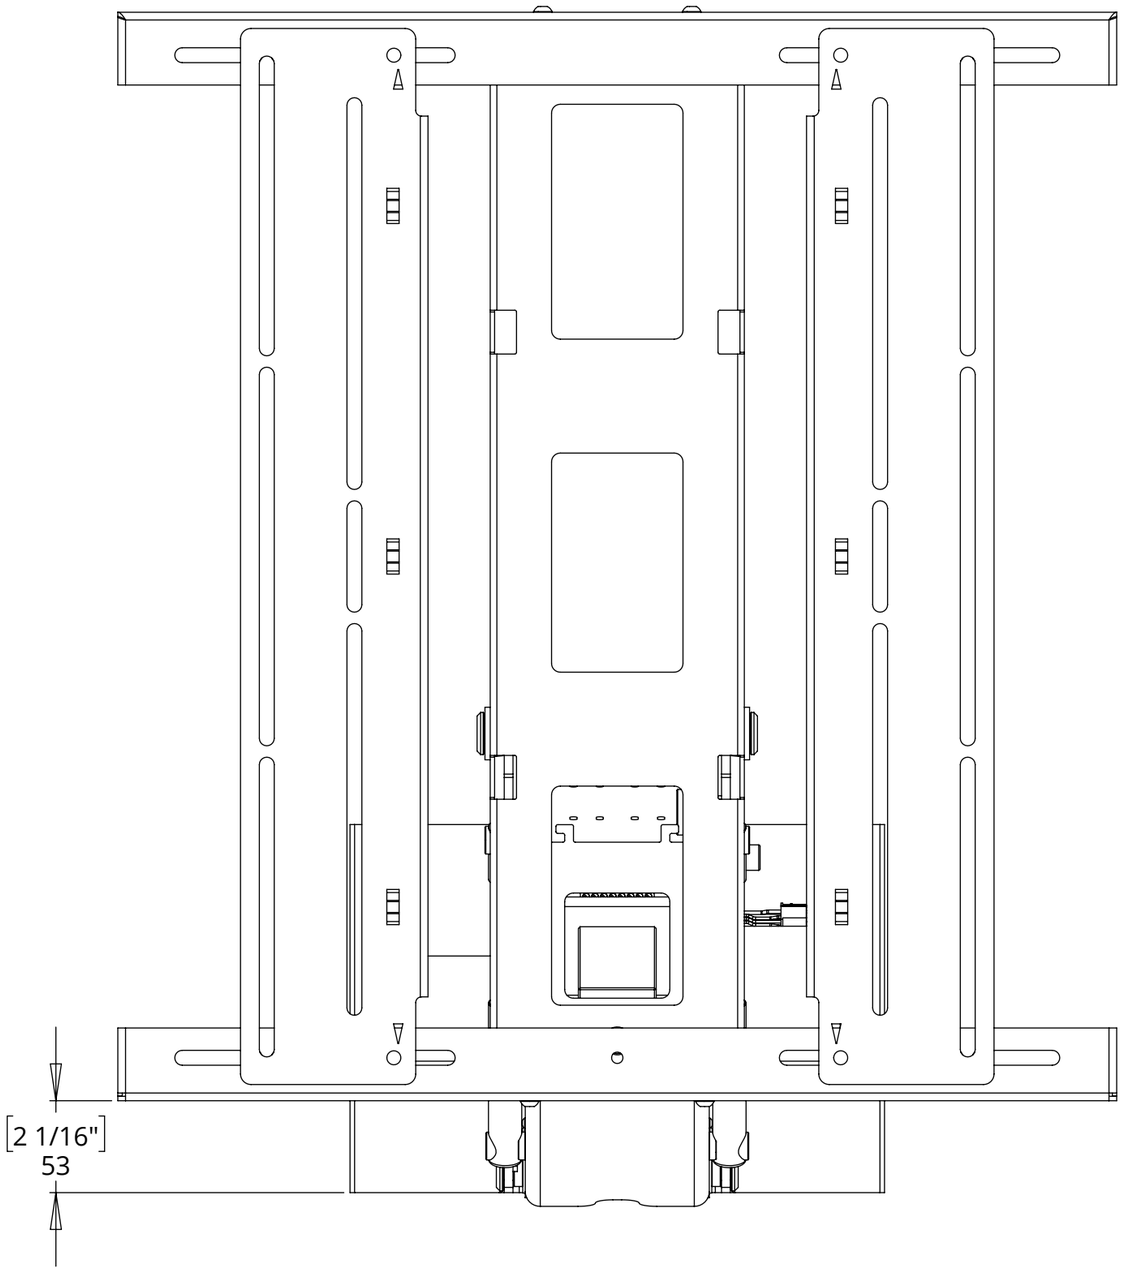

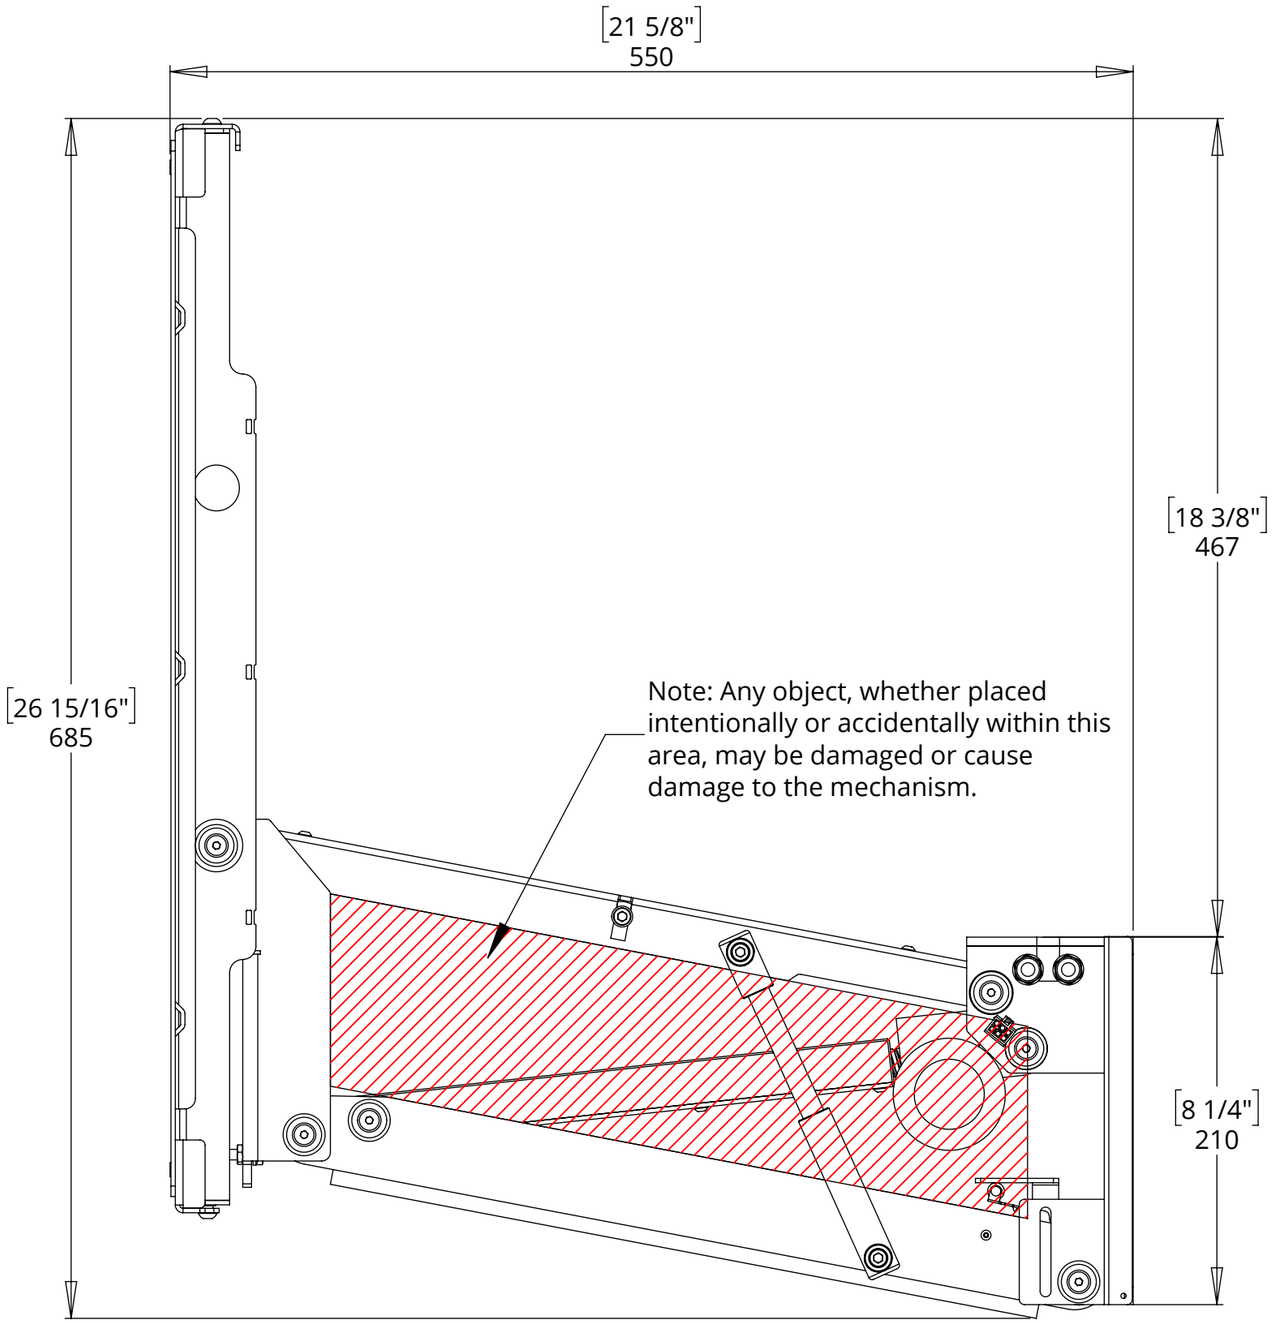



UK +44 (0) 1438 833577 **US** +1 (603) 742 9181
www.**FUTUREAUTOMATION**.NET

TECHNICAL SHEET
ISSUE 005
SHEET 8

EAL
ELECTRIC ADVANCE & LIFT BRACKET

WALL PLATE DIMENSIONS

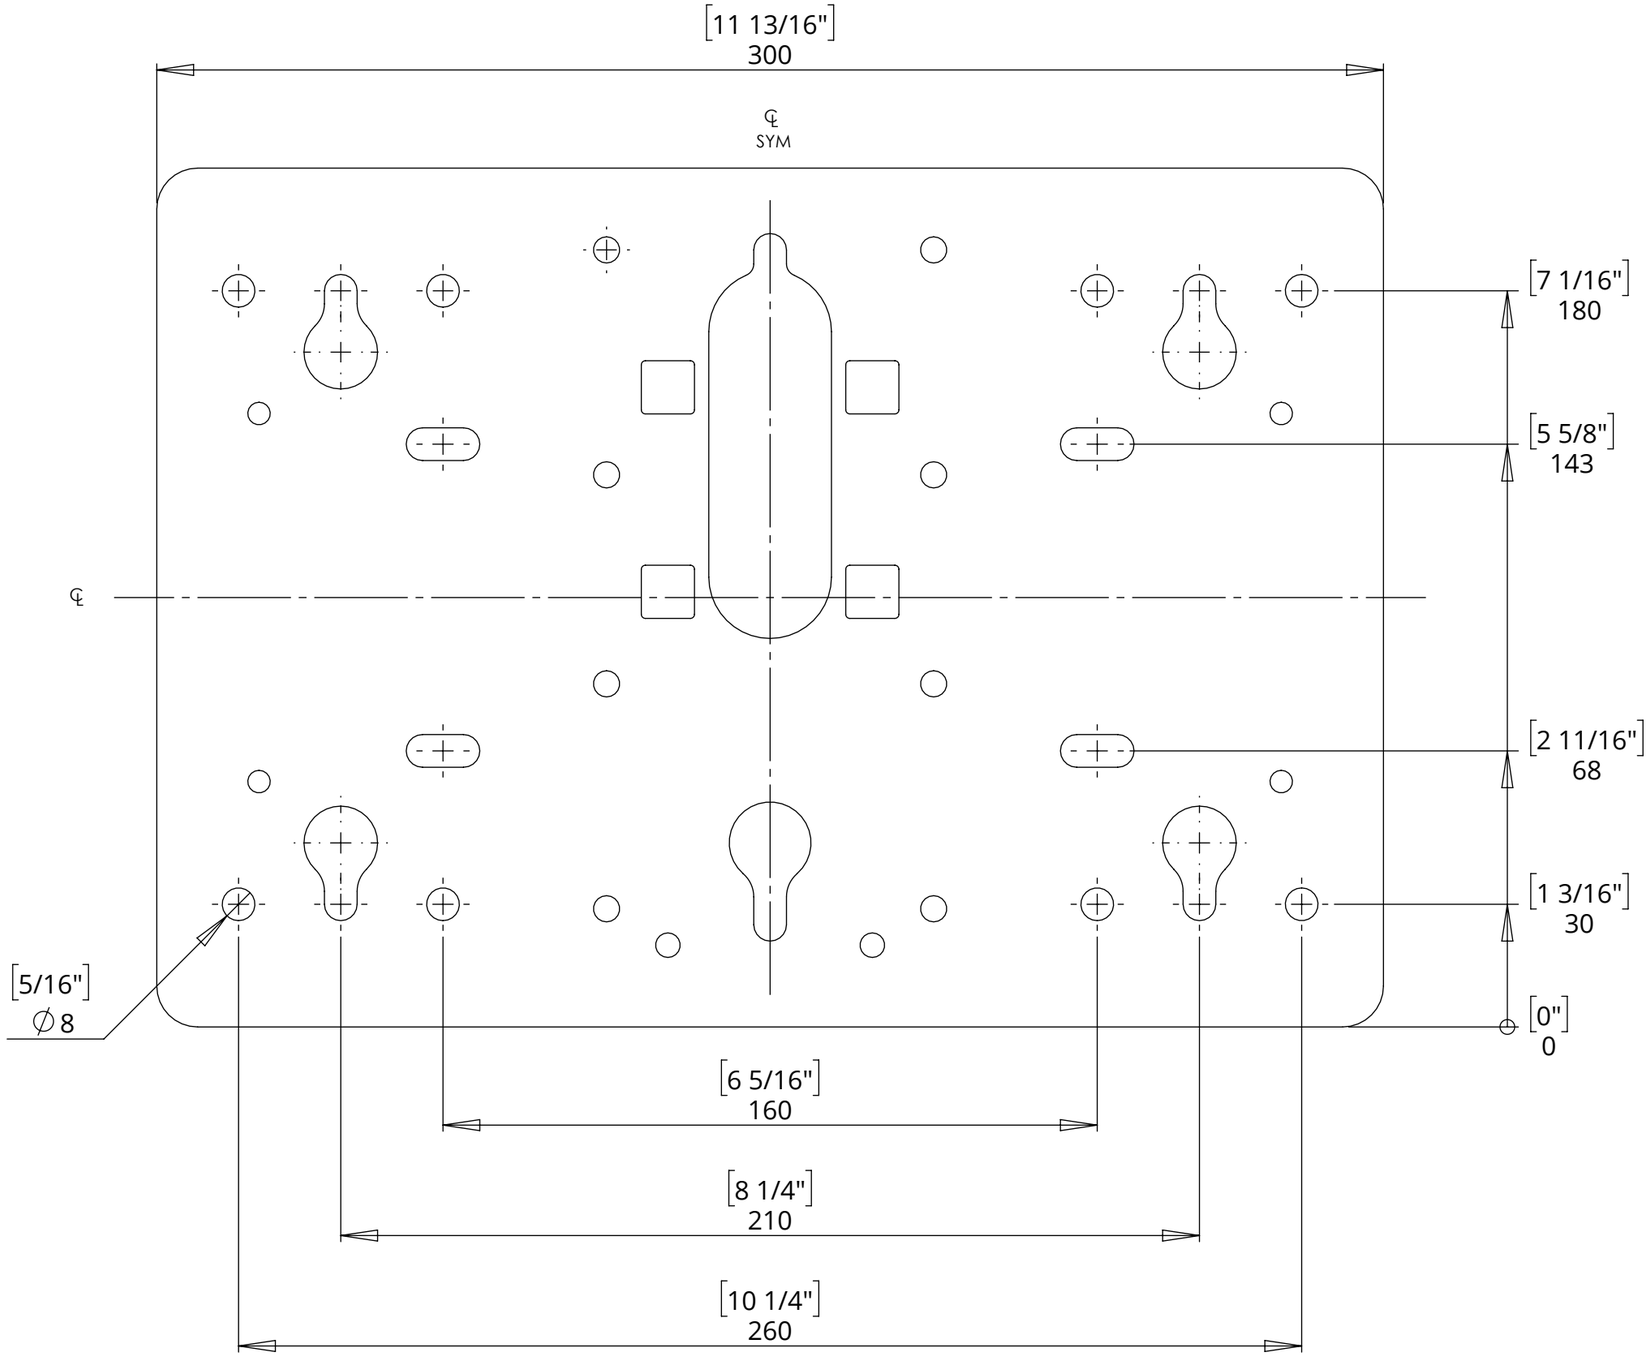

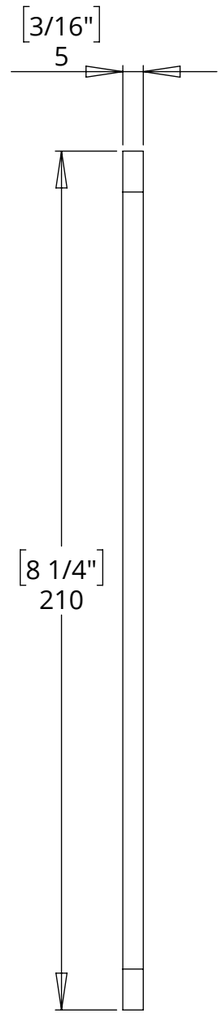

UK +44 (0) 1438 833577 **US** +1 (603) 742 9181
www.**FUTUREAUTOMATION**.NET